

# TUF-2000H Handheld Ultrasonic Flowmeter



## | Features |


- **High Accuracy measuring**  
Accuracy:  $\pm 1\%$ , linearity: 0.5%, repeatability: 0.2%
- **Wide measuring range**  
Several types transducer for selection, measuring pipe size from DN25mm to DN6000mm
- **Large capacity battery**  
Built-in rechargeable Ni-MH battery, provide over 12 hours of continuous operation
- **Non-intrusive measuring**  
Non-intrusive, clamp-on transducer, no pressure drop, no pipe disturbance
- **Support Multiple Language Menu**  
Chinese, English, Italian and other languages can be customized
- **Large LCD display**  
Display instantaneous flow, accumulated flow (positive, negative and net), velocity, working status etc.
- **Built-in data logger**  
Built-in 24K data logger, store over 2000 lines measuring data

# TUF-2000H Handheld Ultrasonic Flowmeter

## | Liquid Type |


This flowmeter can be virtually applied to a wide range of measurement. A variety of liquid applications can be accommodated: ultra-pure liquids, potable water, chemicals, raw sewage, reclaimed water, cooling water, river water, plant effluent. etc

## | Measuring Diagram |

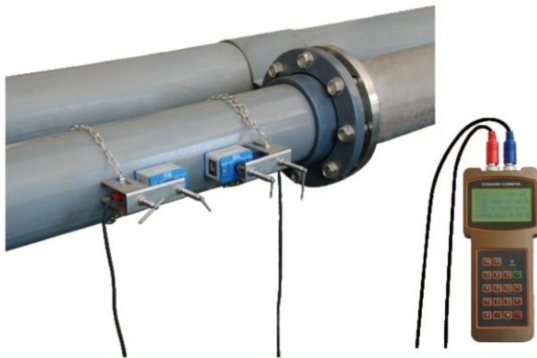

### | Clamp on Transducers |

- Install the clamp on transducer (with magnet) on the pipe, can finish the flow measurement. No pressure drop, no need cut off pipe.
- Several types transducers for selection, measuring pipe size from DN15mm to DN6000mm.
- Several types transducers for selection,

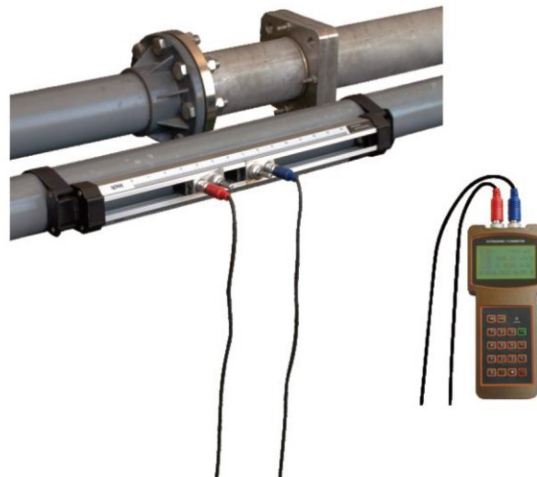

### | Clamp on Mounting Bracket Transducers |

- Bracket transducer can simplify the ultrasonic flowmeter installation process, shorten installation time and improve installation accuracy.
- Install the clamp on bracket transducer (with magnet) on the pipe, can finish the flow measurement. No pressure drop, no need cut off pipe.
- Several types bracket transducers for selection, measuring pipe size from DN15mm to Dn700mm.
- Several types bracket transducers for selection, measuring temperature range from -30°C to 160°C

## | Applications |

Water supply and drainage



Heating



Construction of Energy-saving



Metallurgy



Petrochemical




Power



# TUF-2000H Handheld Ultrasonic Flowmeter

## | Parts Descriptions |

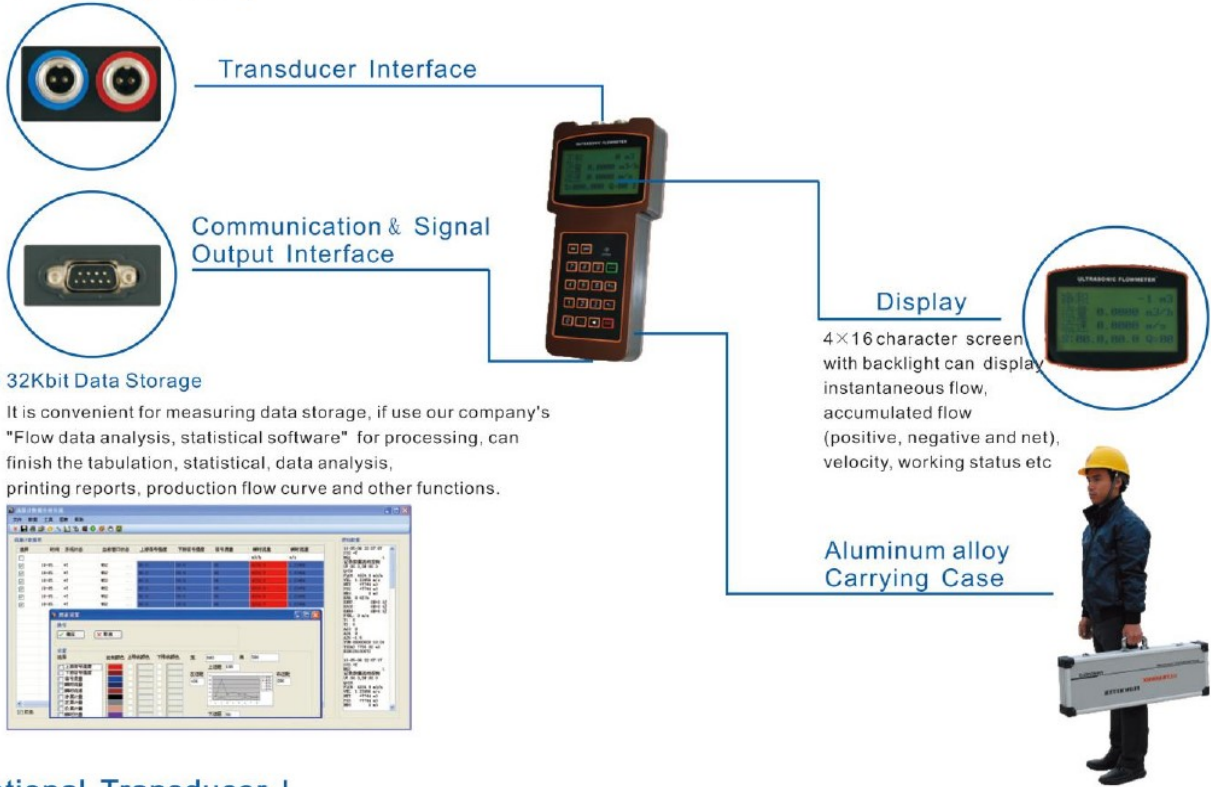

## | Optional Transducer |

Types	Picture	Spec.	Model	Measurement Range	Temperature	Dimension
Clamp on		Small Size	TS-2	DN25~DN100	-30~90℃	45×25×32mm
		Medium Size	TM-1	DN50~DN700	-30~90℃	64×39×44mm
		Large Size	TL-1	DN300~DN6000	-30~90℃	97×54×53mm
High Temperature Clamp on		Small Size	TS-2-HT	DN25~DN100	-30~160℃	45×25×32mm
		Medium Size	TM-1-HT	DN50~DN700	-30~160℃	64×39×44mm
		Large Size	TL-1-HT	DN300~DN6000	-30~160℃	97×54×53mm
Mounting Bracket Clamp on		Small Size	HS	DN25~DN100	-30~90℃	318×59×85mm
		Medium Size	HM	DN50~DN300	-30~90℃	568×59×85mm
		Extended	EB-1	DN300~DN700	-30~90℃	188×59×49mm
High Temperature Mounting Bracket Clamp on		Small Size	HS-HT	DN25~DN100	-30~160℃	318×59×110mm
		Medium Size	HM-HT	DN50~DN300	-30~160℃	568×59×110mm
		Extended	EB-1-HT	DN300~DN700	-30~160℃	188×59×49mm

# TUF-2000H Handheld Ultrasonic Flowmeter

## | Datasheet |

Items		Performance & Parameter
Convertor	Principle	Transit-time ultrasonic flowmeter
	Accuracy	±1%
	Display	4×16 character LCD with backlight, support the language of Chinese, English and Italy
	Data Interface	Insulate Rs232 serial interface, upgrade the flowmeter software by computer
Pipe Installation Condition	Pipe Material	Steel, Stainless steel, Cast iron, Copper PVC, Aluminum
	Pipe Diameter	25~6000mm
	Straight Pipe	Transducer installation should be satisfied: upstream10D, downstream 5D, 30D from the pump
Measuring Medium	Type of Liquid	Single liquid can transmit sound wave such as Water (hot water, chilled water, city water, sea water, waste water, etc.) Sewage with small particle content
	Temperature	-30~160°C
	Turbidity	No more than 10000ppm and less bubble
	Flowrate	0~±10m/s
Working Environment	Temperature	Convertor: -20~60°C; Flow Transducer: -30~160°C
	Humidity	Convertor: 85%RH; Flow Transducer: Ip67
Power Supply	3 AAA built-in Ni-MH batteries 1.2V(for over 12 hours of operation). 90V-260V AC adapter	
Power Consumption	1. 5W	
Case Material	ABS	
Dimension	200*93*32MM(Convertor)	

## | Ordering Code |

TUF-2000H - Optional Transducer - Cable length

5 5m×2 (Standard)

10 10m×2

Example: TUF -2000H +HM++ 10m

PS: Standard configuration = TUF -2000H (convertor)+TM-1+5M\*2 cable +Stretcher+Couplant(1 pc)+ Carrying case+Ruler